


Wireless Remote Indicator Module Installation Guide

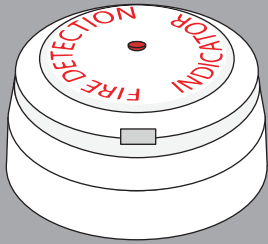


Example shown:
Model FCX-178-001

1 Pre Installation




Installation must conform to applicable local installation codes and should only be installed by a fully trained competent person.

- Ensure that the device is installed as per the site survey.
- The use of a non-metallic spacer should be considered if mounting the device on to a metal surface.
- Do NOT Press the Log On button on a pre-programmed device. This will cause communication with the Control Panel to be lost. Should this happen, delete the device from the system and add it back on.

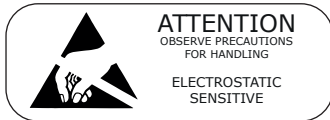


2 Components

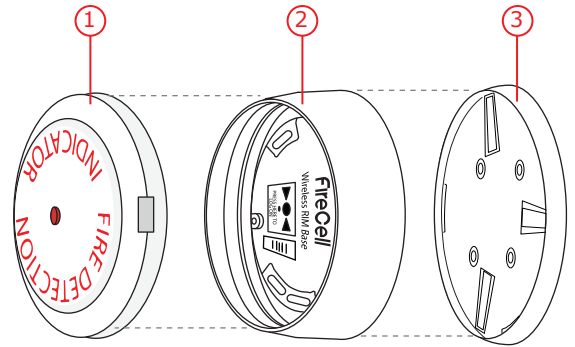

① Remote Indicator ② Wireless Module ③ Mounting Plate


3 Disassemble Device

- First disengage the remote indicator from the wireless module by turning it anticlockwise. This exposes the wireless module's locking pin as shown.
- Disengage the mounting plate by turning the wireless module anticlockwise, whilst pressing down the locking pin.

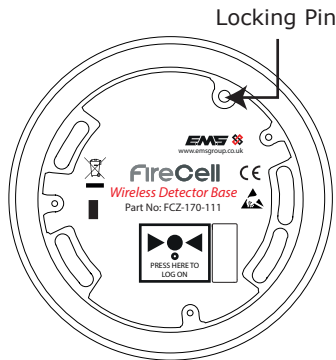



4 Fix Mounting Plate

- When wall mounting, ensure the mounting plate is fitted in the orientation shown.
- Use all four mounting holes to ensure a firm fixing.
- Use suitable fasteners and fixings.

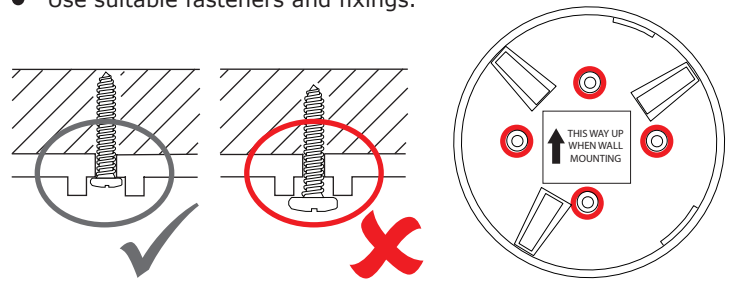

5 Power Device


- When fitting / replacing batteries; observe correct polarity, using only specified batteries.
- Connect the power jumper across the PIN header.

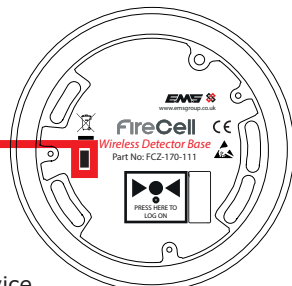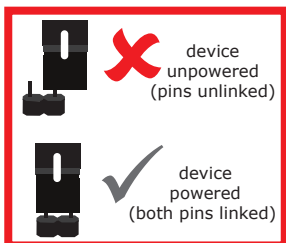

- Once powered, reassemble the device.


6 Optional Locking

- To lock the remote indicator into the wireless module, remove the cut out section as shown.

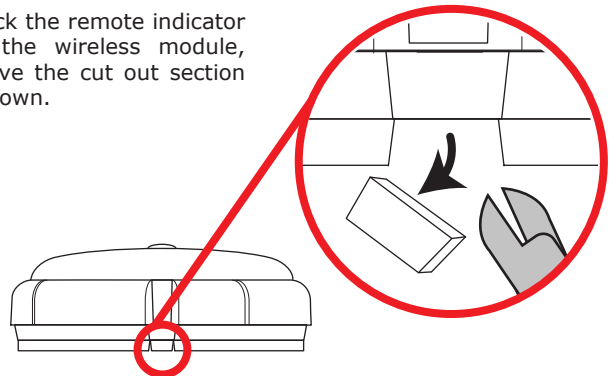

6 Unlocking

- To unlock the device, insert a flat bladed screwdriver into the release slot and turn the remote indicator anticlockwise to release, as shown.

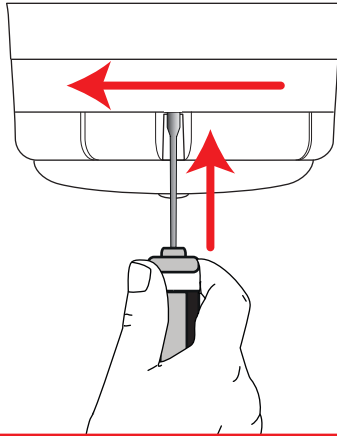

7 Configuration

The device's loop address is configured within the menu structure of the Radio Hub.

- Refer to the Wireless Remote Indicator Programming Instructions (Doc Ref: TSD115) for further information.



Free to download from www.emsgroup.co.uk

Specification

Operating Temperature	-10°C to 55°C
Storage Temperature	5°C to 30°C
Humidity	Up to 95% non-condensing
Supply	6x AA Alkaline (Panasonic LR6AD Powerline / Varta 4006 Industrial)

CAUTION!
Fitting of an incorrect battery type invalidates the product certification and may result in poor performance.

IP Rating	IP23
Operating Frequency	868MHz
Output Transmitter Power	Auto adjusting 0 - 14 dB (0 - 25 mW)
Dimensions	113mm (Ø) 81mm (D)
Weight	0.40kg
Location	Type A: For indoor use

Regulatory Information

Manufacturer	EMS Security Group Ltd. Technology House, Herne Bay, Kent, CT6 8JZ, United Kingdom
Year of manufacture	See devices serial number label
Certification	CE 10
Certification body	0359
CPR Certificate DOP	0359-CPR-00127
Approved to	EN54-25:2008. Incorporating corrigenda September 2010 and March 2012. Fire detection and fire alarm systems. Part 25: Components using radio links.
European Union directives	EMS Security Group Ltd hereby declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU (R&TTE directive). 2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see www.recyclethis.info Dispose of your batteries in an environmentally friendly manner according to your local regulations.

