




FCX-500-004 FCX-500-444

Product description

4 Loop Radio Hub

4 Loop Radio Hub c/w Remote Aerial Facility

Radio Hub Installation Guide

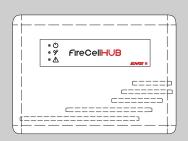

1 Pre installation



Installation must conform to applicable local installation codes and should only be installed by a fully trained competent person.

- Ensure the Hub is installed as per the site survey.
- Refer to step 3 to ensure optimised wireless performance.
- If using remote aerials with this product, refer to the remote aerial installation guide (MK293) for more information.
- This device contains electronics that may be susceptible to damage from Electrostatic Discharge (ESD). Take appropriate precautions when handling electronic boards.


2 Components FireCellHUB 1 4x corner covers, 2 4 x lid screws, 3 Hub lid, 4 Hub PCB, 5 Hub back box

3 Mounting location guidelines




optimum wireless performance, the following must be observed:

- Ensure the Hub is not installed within 2 m of other wireless or electrical equipment (not including the panel).
- Ensure the Hub is not installed within 0.6 m of metal work.
- Ensure the Hub is close coupled above the panel.

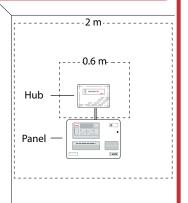


4 Optional PCB removal

Remove the three circled retaining screws, before unclipping the PCB.

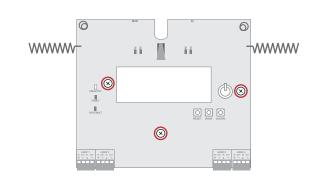


5 Remove cable entry points

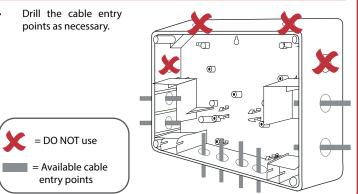


6 Fix to the wall

- All five circled fixing positions are available for use as required.
- The key hole can also be used for locating and fixing where required.

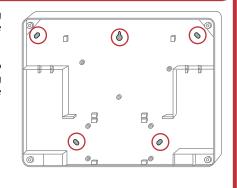


7 Connection wiring

- Loop cables should only be passed via the access points available.
- retardant cable glands must be used.
- DO NOT leave excess cable in the radio hub.

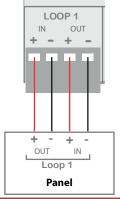


Hub 1 loop connection

 

8 Apply power

Apply power to the control panel. The normal LED states for the Hub are as

- The green HEALTHY LED will illuminate.
- The yellow FAULT LED will be extinguished
- The yellow SYS FAULT LED will be extinguished.

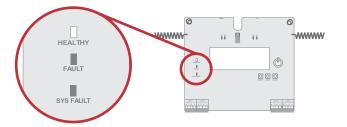

9 Configuration

The Hub's programming and loop address are configured within the menu structure of the Hub.

Repeat for loops 2, 3 and 4 if used.


Refer to the programming manual (MK98) for details of compatible FireCell devices and full programming information.



Free to download from www.emsgroup.co.uk

10 Close the Hub

- Ensure that the Hub PCB is correctly inserted and that the PCB retaining screws are refitted.
- Refit the Hub lid, ensuring the LEDs are not damaged by the light pipe when refitting.

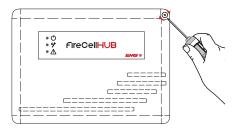

Specification

-10 to +55 °C **Operating temperature**

Storage temperature 5 to 30 °C

Humidity 0 to 95% non-condensing

Operating voltage 17 to 28 VDC

Operating current Loop 1 27 mA (typical) 63 mA (max.)

> 4 mA* (typical) Loops 2 to 4

4 mA* (max.)

* Per each connected loop

IP54 **IP** rating

Operating frequency 868 MHz

Output transmitter power 0 to 14 dBm (0 to 25 mW)

Signalling protocol Χ

Panel protocol

Dimensions (W x H x D) 270 x 205 x 85 mm

Weight 0.95 kg

Location Type A: For indoor use

Regulatory information

Manufacturer KGS Manufacturing Poland Sp. z o.o.

Ul. Kolejowa 24. 39-100 Ropczyce, Poland

Year of manufacture See devices serial number label

Certification





DoP number 0359-CPR-0028

Approved to EN54-18:2005. Fire detection and fire alarm systems.

Part 18:Input/output devices.

EN54-25:2008. Incorporating corrigenda September 2010

and March 2012. Fire detection and fire alarm systems.

European Union EMS declares that this device is in compliance with Directive Directives 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.

emsgroup.co.uk

2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see www.recyclethis.info

Dispose of your batteries in an environmentally friendly manner according to your local regulations.