

Introduction

The following instructions detail the operation of the 7913 Moneyclip Transmitter. The 7913 is compatible with the EMS 7703 Receiver. There are two optional modes of operation; single action mode and dual action mode. Both methods are outlined below.

To enable the Moneyclips to work correctly, the four way switch inside the Moneyclip must be set to match the transmitter type switches, labelled 'Option' in the 7703 Receiver.

7703 Receiver's 'Option' switches 7 and 8 control the transmitter type, as shown in Figure 1.

8	7	Transmitter Type
OFF	OFF	Opposed buttons for Alarm
OFF	ON	Non-opposed buttons for Alarm
ON	OFF	Three buttons for Alarm
ON	ON	Not Used Reserved

Figure 1

The four way switch inside the Moneyclip controls the transmitter type and selects single or dual action operation, as shown in Figure 2.

Used to select transmitter type	Switch 1	ON	Simulates three button handpush
	Switch 2	ON	Simulates non-opposed handpush
	Switch 3	ON	Simulates opposed handpush
Used to select single or dual action operation	Switch 4	ON	Dual Action operation
	Switch 4	OFF	Single Action operation

Figure 2

Example: If the 'Option' switches in the 7703 Receiver are set to 8 ON and 7 OFF, then to match three buttons for alarm, switching 1 ON inside the Moneyclip would ensure they match. If the dual action option is required, Switch 4 would also need to be ON.

Single Action Mode

The 7913 transmitter can be configured for single action operation as shown in Figure 2. The transmitter can be seen in Figure 3 and the single action operation is explained below:

Pushbutton pressed	Local Alarm initiated
Pushbutton pressed & Note removed	Full Alarm initiated
Note removed	Full Alarm initiated

Dual Action Mode

The 7913 transmitter can be configured for dual action operation as shown in Figure 2. The transmitter can be seen in Figure 3 and the dual action operation is explained below:

Pushbutton pressed	Local Alarm initiated
Pushbutton pressed and after 20 seconds has expired, Note is removed	Two Local Alarms initiated
Pushbutton pressed and Note removed before 20 seconds has expired	Local Alarm followed by a Full Alarm initiated
Note remains removed without Pushbutton being pressed	Local Alarm initiated.

Alarm Latch Memory

If upon the pressing of the top button the internal LED lights, this indicates a Full Alarm activation has been initiated from the Moneyclip within the last 12 hours.

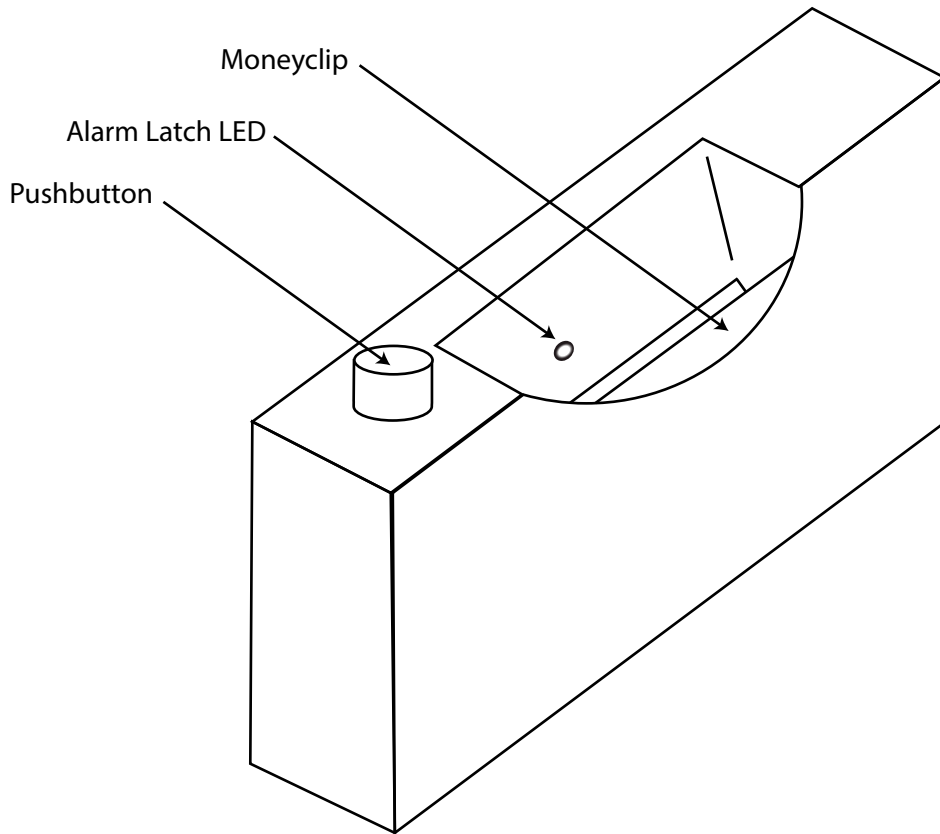


Figure 3