




# FireCell

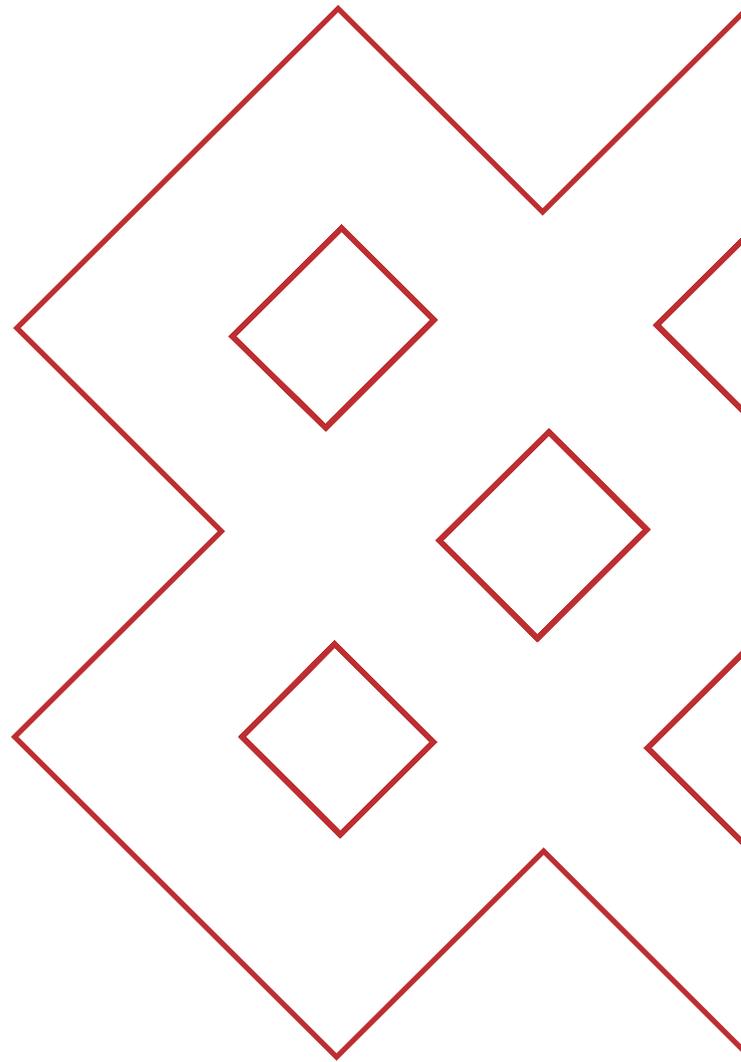

# CURRENT CONSUMPTION

# Introduction

This document outlines the current consumption of the FireCell equipment range.

It is the responsibility of the installer / system designer to carry out calculations for the entire installation to ensure supply and battery backup requirements are compliant with local codes of practice.

Annex D of BS5839 for example, outlines the following method for calculating standby battery capacity:

## D.1 Valve regulated lead acid batteries

D.1.1 The minimum capacity of valve regulated lead acid batteries should be calculated in accordance with the following formula:

$$C_{min} = 1.25 (T1 I1 + D I2/2)$$

where:

$C_{min}$  = minimum capacity of the battery when new at the 20 h discharge rate and at 20 °C in ampere hours;

$T1$  = total battery standby period in hours;

$I1$  = total battery standby load in amperes;

$I2$  = total battery alarm load in amperes;

$D$  = a de-rating factor.

D.1.2 Where  $C_{min}/20$  will be equal to or greater than  $I2$ , it can be assumed that  $D = 1$ . When  $C_{min}/20$  is less than  $I2$ , the value of  $D$  should either be based on the battery manufacturer's data or should be 1.75.

D.1.3 In practice,  $C_{min}$  is unlikely to correspond exactly to an available battery capacity and therefore the next highest available capacity size should be used.

## D.2 Batteries other than valve-regulated lead acid batteries

The minimum capacity of batteries, other than valve regulated lead acid batteries, should be determined by consultation with the battery manufacturer and should take into account the standby load, the alarm load, any required de-rating to take account of the higher current drawn in the alarm condition and a de-rating factor to take account of battery ageing during the anticipated life of the battery.

 **Note: check your local codes of practice as calculation methodology may vary.**

# Syncro AS Control Panels

## Syncro AS 1 Loop Analogue Addressable Fire Panel

<b>Quiescent current</b>	0.13A
<b>Alarm current</b>	0.3A
<b>Max battery capacity</b>	12V 9Ah



## Syncro AS 2 Loop Analogue Addressable Fire Panel

<b>Quiescent current</b>	0.195A
<b>Alarm current</b>	0.37A
<b>Max battery capacity</b>	12V 9Ah




# Syncro / Syncro AS Control Panel Networking

## Network Card for wired or wireless networks

*1 required per Fire Control Panel*

**Syncro AS Panel** 0.06A

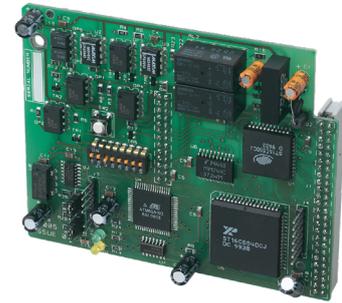

## FireCell RNC (Radio Network Communicator)

*1 required per Fire Control Panel*

**Current consumption** 0.027A



# Taktis Fire Control Panels

## Taktis 2 Loop Analogue Addressable Fire Panel

<b>Quiescent current</b>	0.38A
<b>Alarm current</b>	0.53A
<b>Max battery capacity</b>	12V 26Ah



## Taktis Additional 2 Loop Card - Max 8 loop panel capacity

**Current Consumption** 0.08A \*



\*Note maximum 3x additional 2 loop cards can be added to the 2 loop panel

# Taktis Control Panel Networking

## Taktis Network Module for wired or wireless networks

*1 required per Taktis Fire Control Panel*

**Current consumption** 0.059A



## Taktis RNC (Radio Network Communicator)

*1 required per Taktis Fire Control Panel*

**Current consumption** 0.035A



# 2X-A Control Panels

## 2X-A 2 Loop (6 A PSU) Analogue Addressable Fire Panel

**Quiescent current** 2.5A  
**Alarm current** 5.8A  
**Max battery capacity** 12V 18Ah



## 2X-A 2 Loop (10 A PSU) Analogue Addressable Fire Panel

**Quiescent current** 2.5A  
**Alarm current** 7.2A + 2.8A for battery changer  
**Max battery capacity** 12V 12Ah (internal)  
12V 65Ah (external box)



## 2X-A Additional 2 Loop Card - Max 4 loop panel capacity

**Current Consumption** 0.12A



## Zone LED boards

**Current Consumption** 0.012A (20 zone)  
0.014A (40 zone)



# 2X-A Control Panel Networking

## 2X-A Network Module for wired networks

**Current consumption**      0.05A



# Wireless Infrastructure

## 4 Loop Radio Hub

*1 required per Fire Control Panel*

<b>1 loop used</b>	0.024A
<b>2 loops used</b>	0.031A
<b>3 loops used</b>	0.038A
<b>4 loops used</b>	0.045A



## Fusion RLM (Radio Loop Module)

*Up to five per loop using FireCell panel subject to cable specification.*

**Current consumption** 0.017A





**Technology House  
Sea Street  
Herne Bay, Kent  
CT6 8JZ**  
**[emsgroup.co.uk/contact](https://emsgroup.co.uk/contact)**

*Contact us*



---

The information contained within this literature is correct at time of publishing. EMS reserves the right to change any information regarding products as part of its continual development enhancing new technology and reliability. EMS advises that any product literature issue numbers are checked with its head office prior to any formal specification being written.