


4240 Pager Transmitter Setup

IRIS+ Back Box

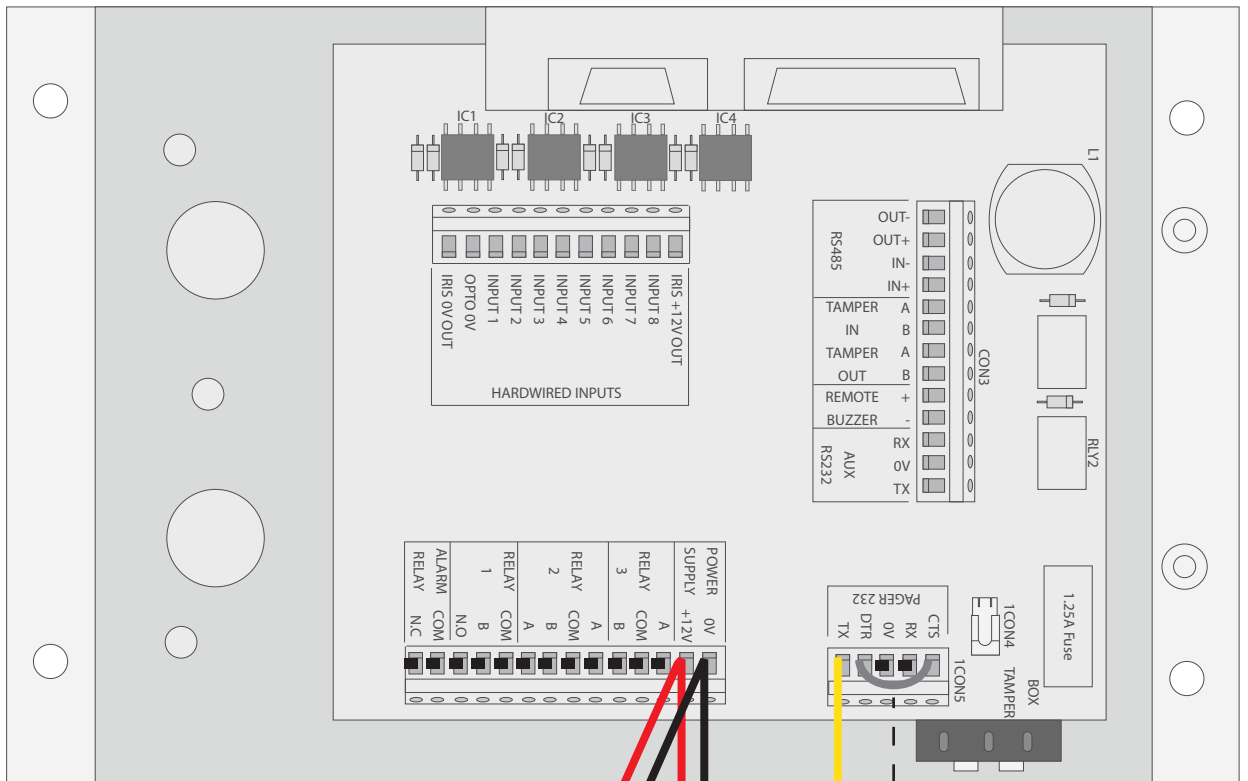

Min 3m distance between units




12V Input (750mA minimum)

Note: Wire link fitted

Belden 8728 Cable (Max 20m cable run)

4240 Pager Transmitter

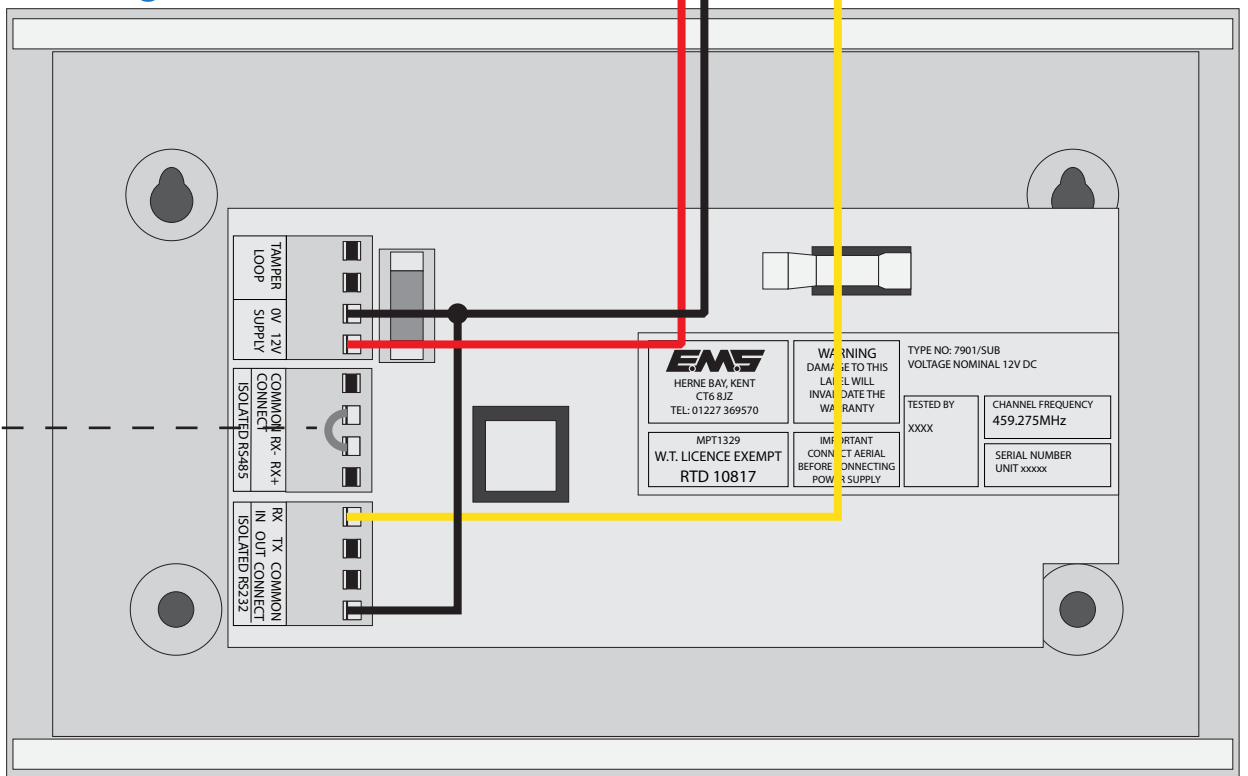

Note: Wire link fitted

Iris+ receiver quick programming

For standard pager operation, select the following:

*From Iris+ front display > Key to reset > enter pin (default 221100) > Pager Setup > **Add New Pager***

Pager ID to match pager ID label on pager receivers

Alpha 80

Buzzer A

*From Iris+ front display > Key to reset > enter pin (default 221100) > Pager Setup > **Transmitter Setup***

TYPE A

5 secs

PAGER 232

The 7256 Iris+ receiver is now setup to utilise the 4240 Pager Transmitter.



EMS Ltd.

Technology House
Sea Street, Herne Bay,
Kent, CT6 8JZ.

t: +44 (0) 1227 369570

f: +44 (0) 1227 369679

www.emsgroup.co.uk